


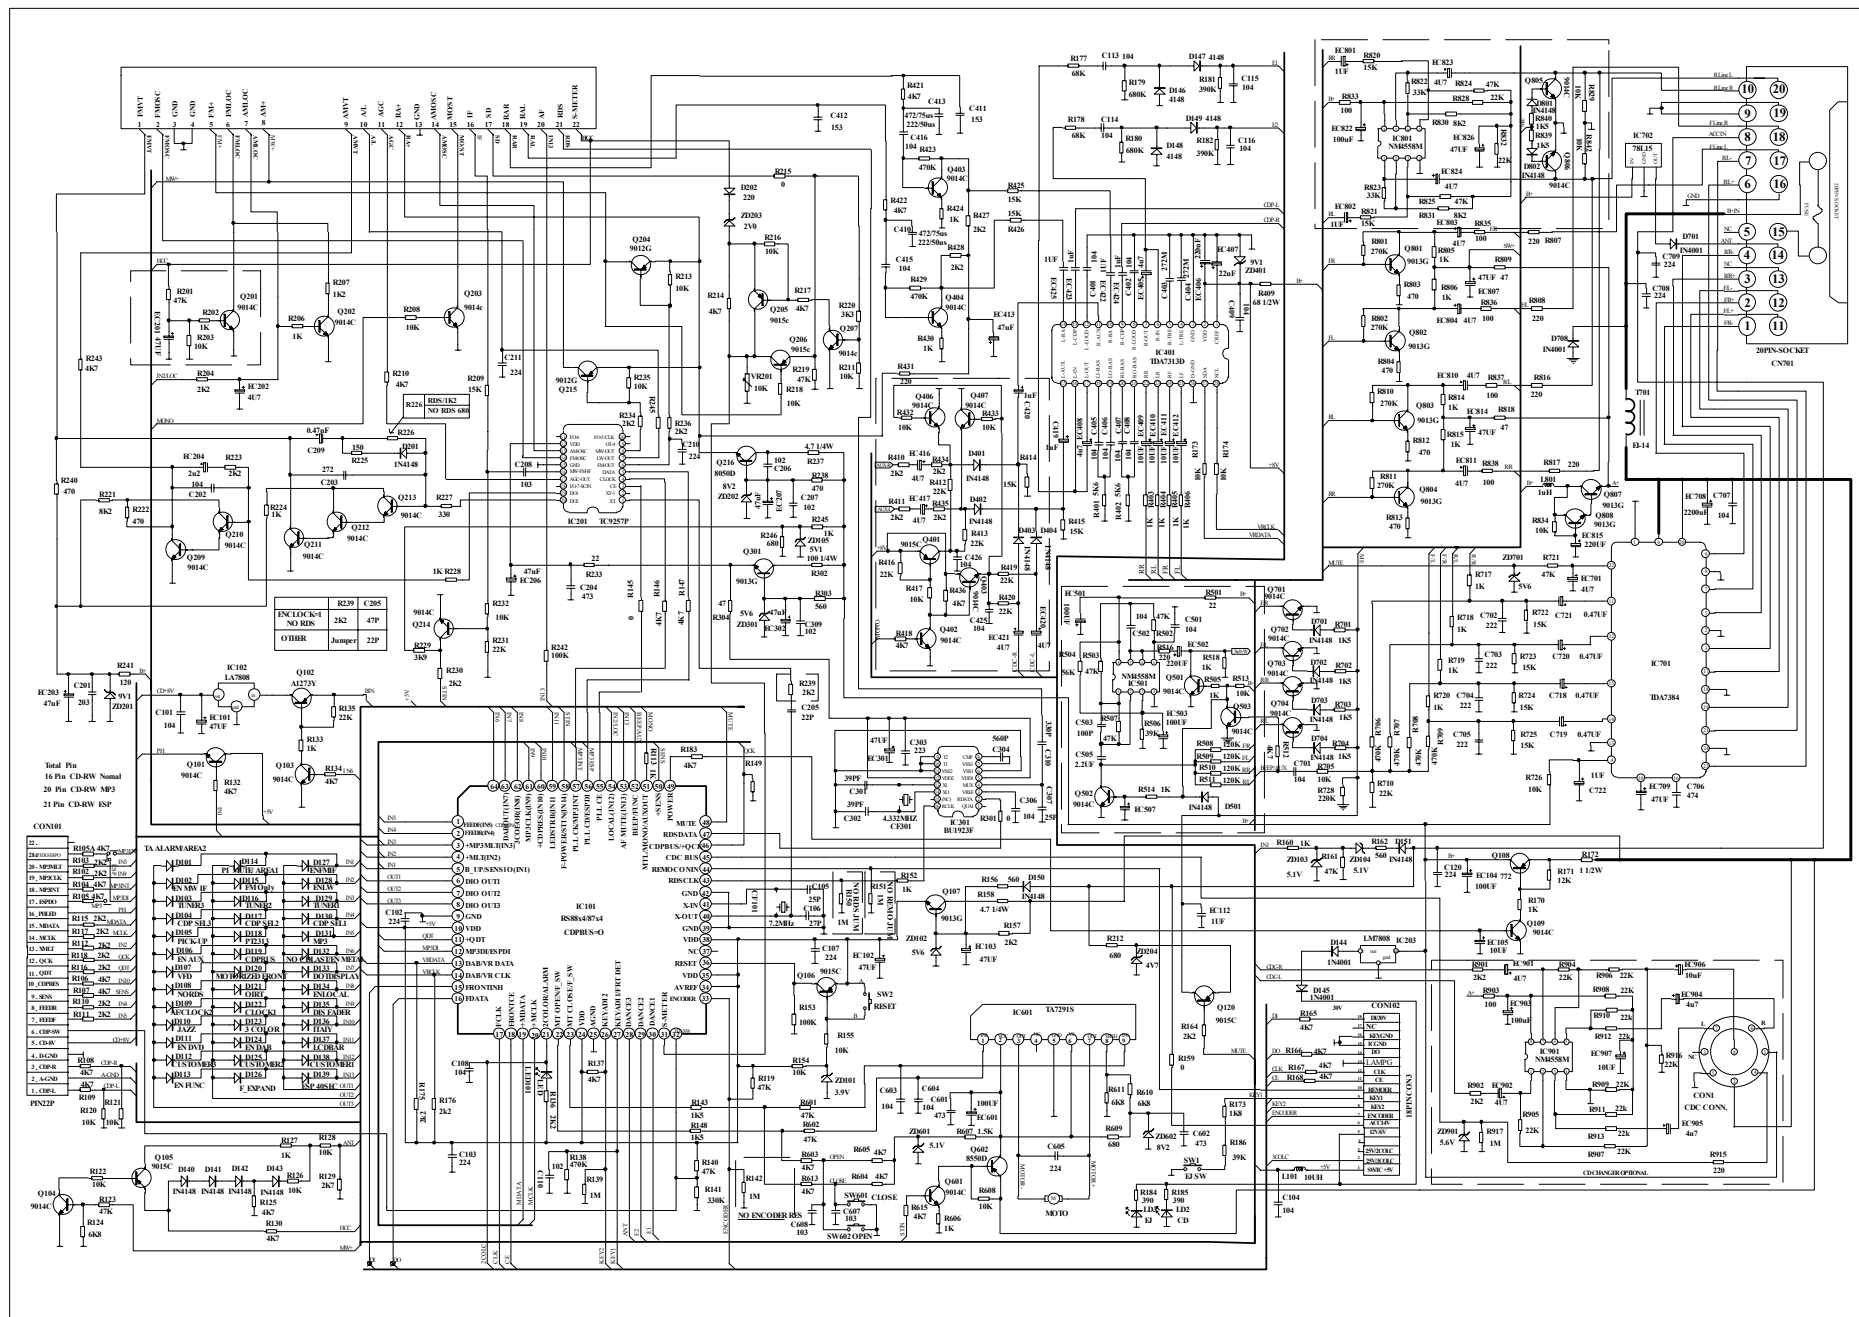


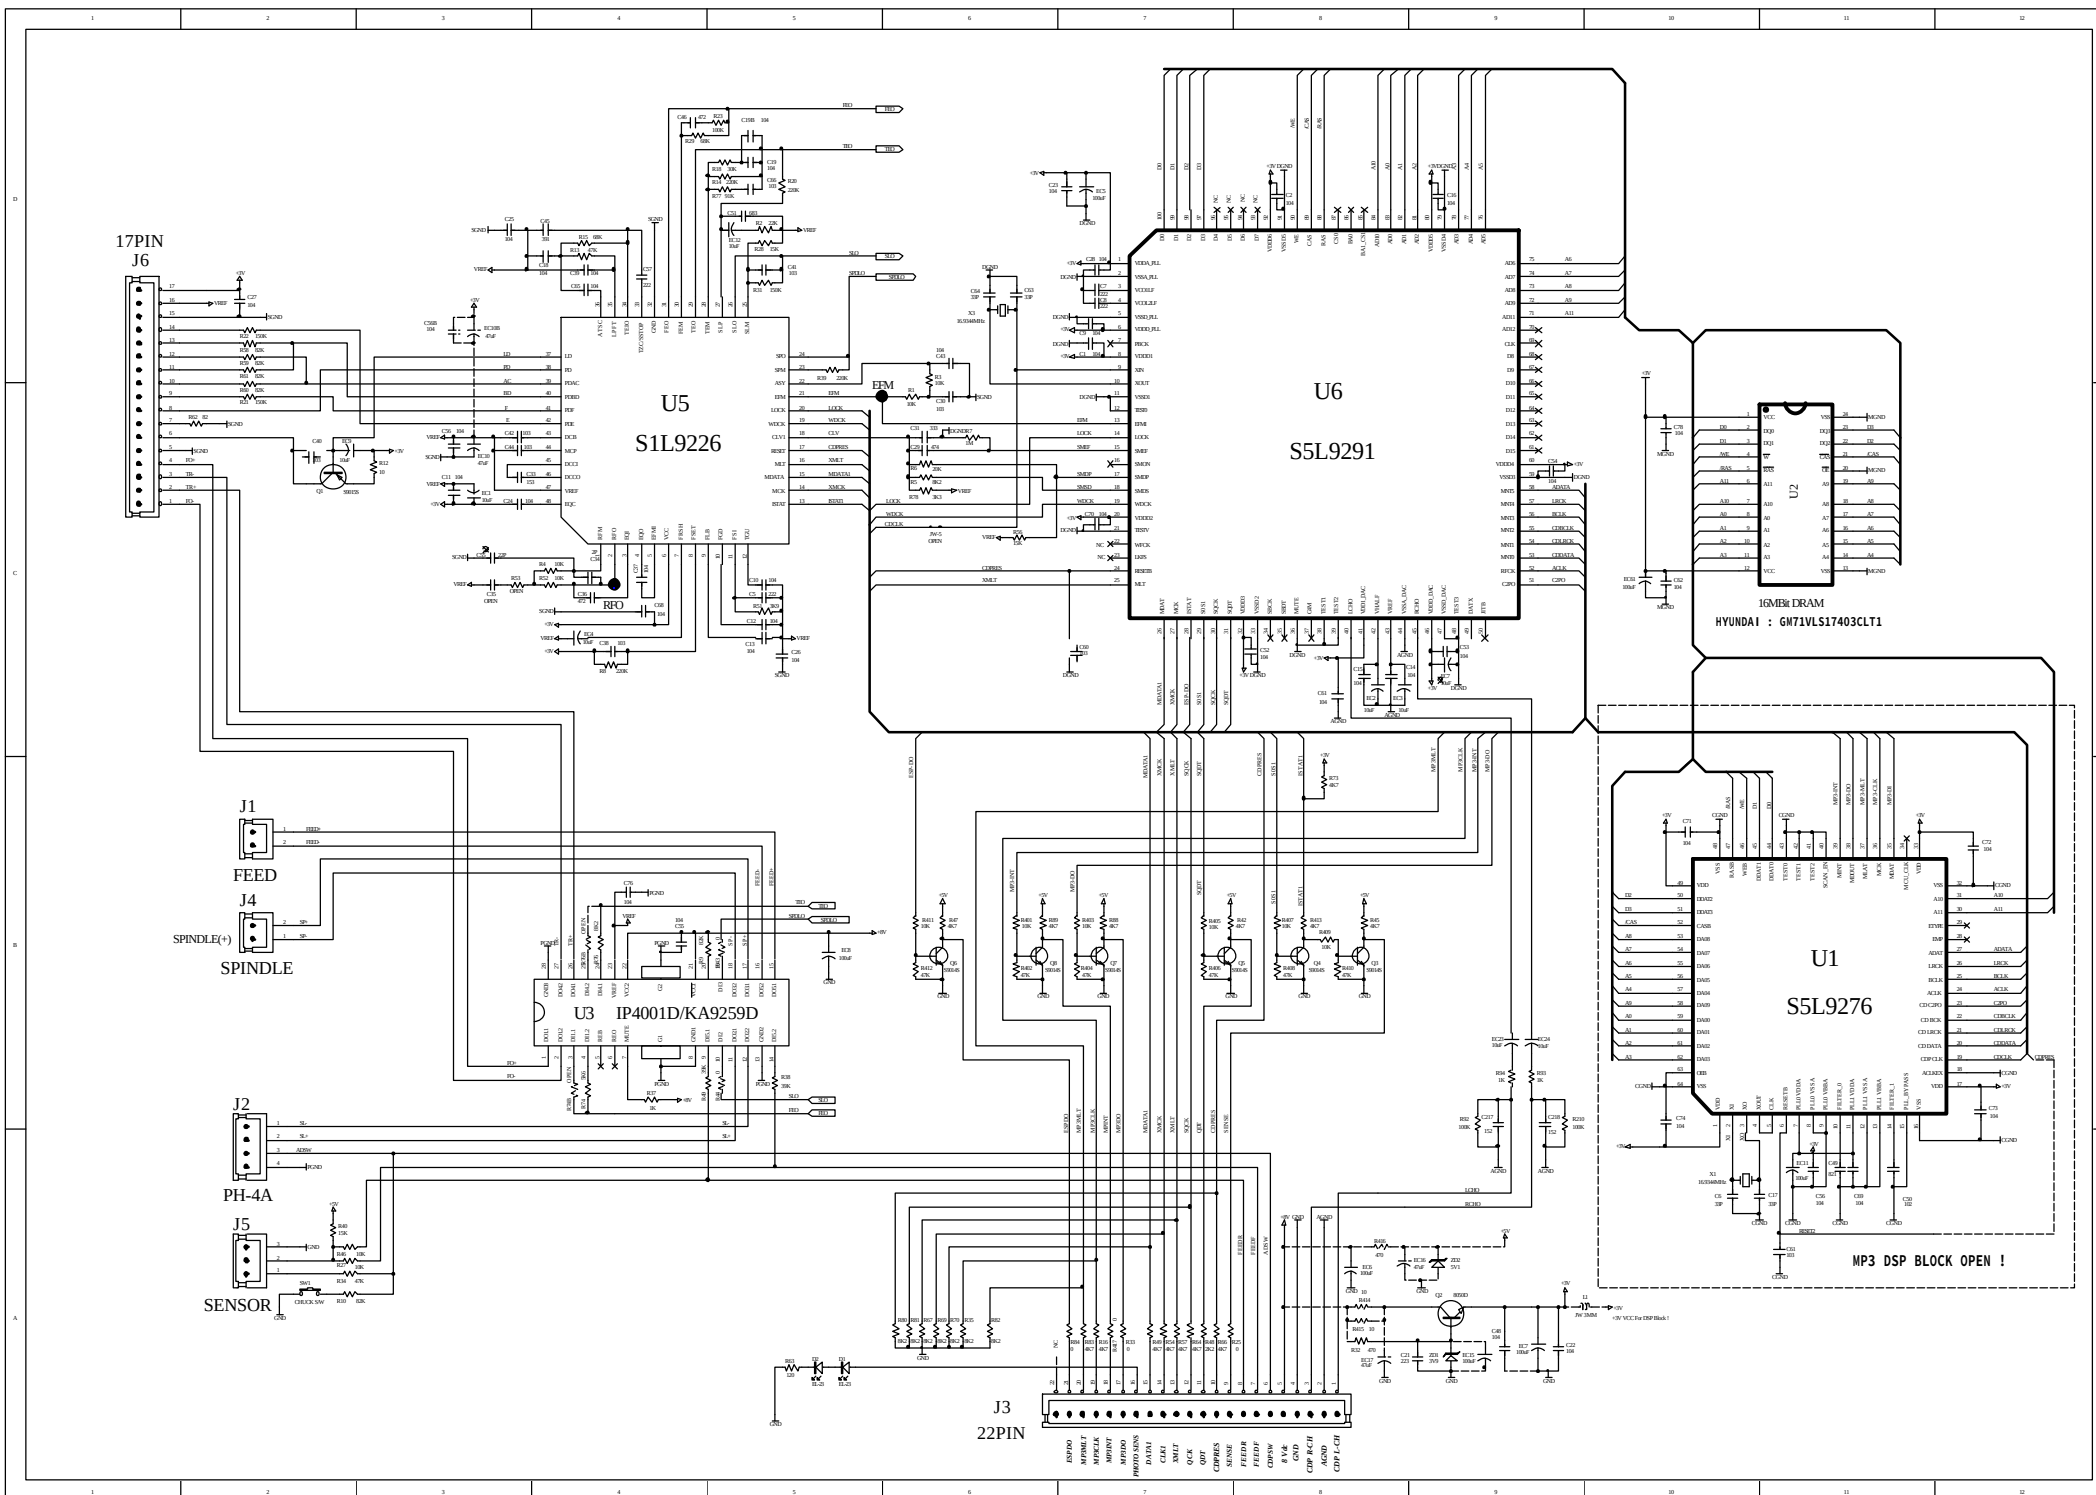


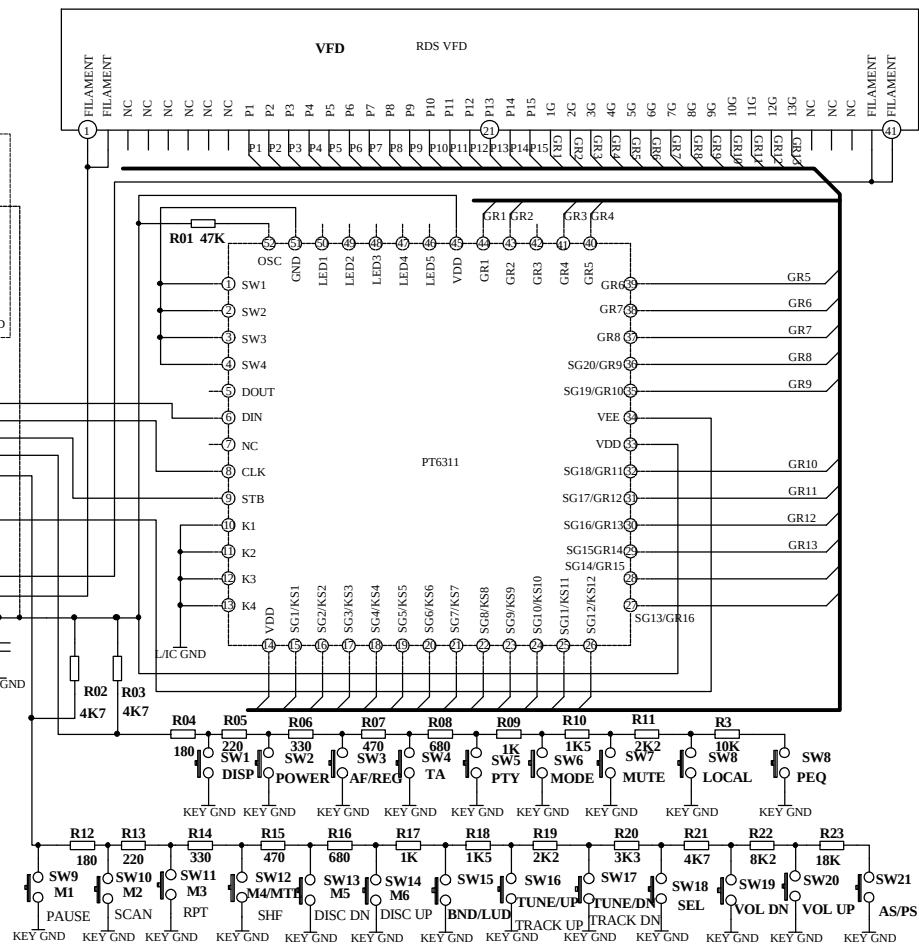

R	V	14V4	6V8
LED R1	1K5	150	
LED R2	1K5	150	

CON1	18
30V	17
30	16
KEYGND	15
L/ICGND	14
DO	13
CD POEN	12
CLK	11
CE	10
RC	9
KEY2	8
KEY1	7
NC	6
NC	5
12V/6V	4
+5v	3
25V	2
25V	1
SW/IC +5V	
18PIN	

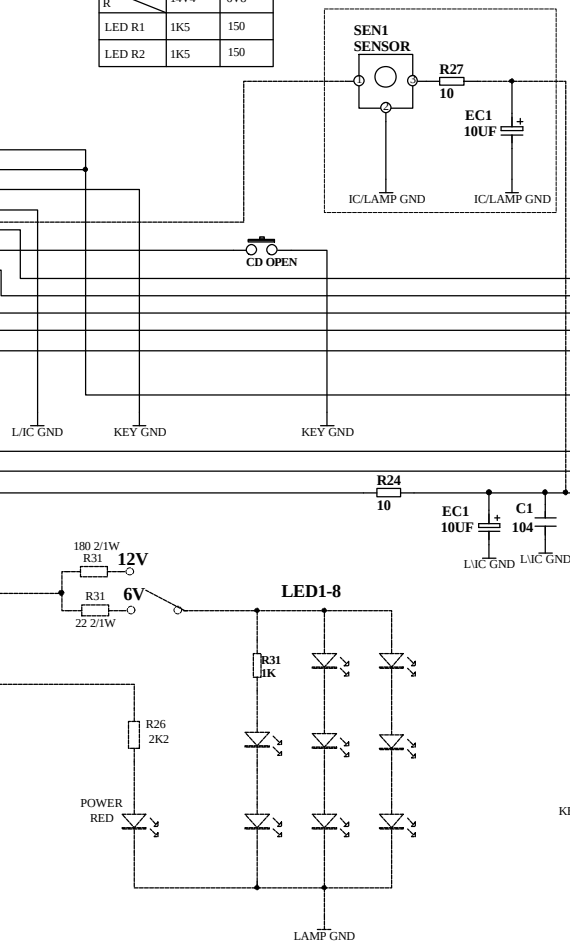

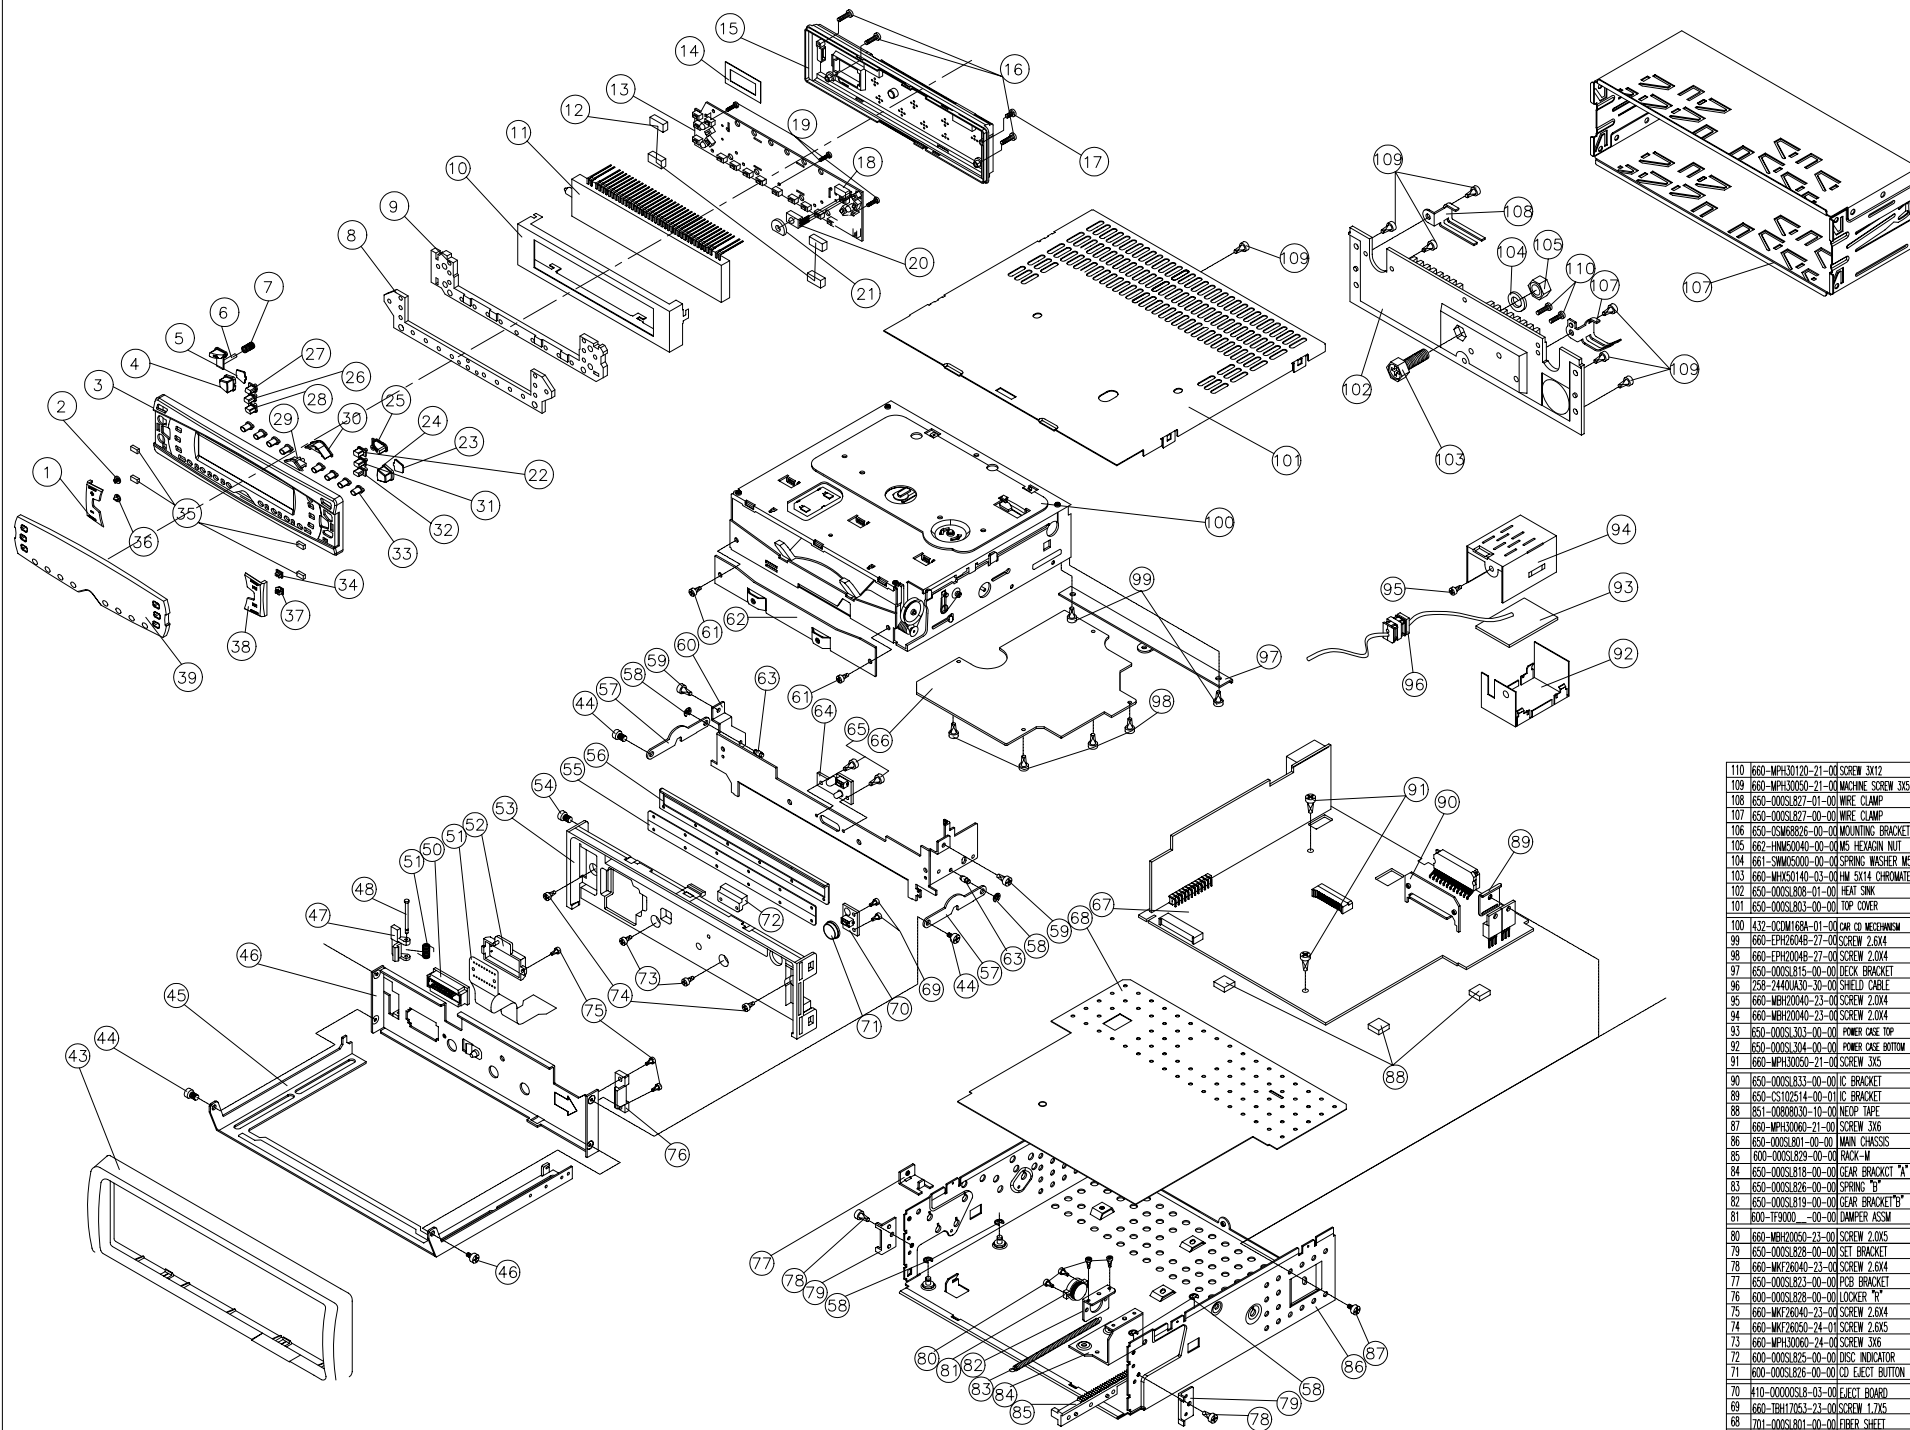

65	660-MH20040-23-00	SCREW 2.0X4	3
64	410-000005L8-04-00	RESET BOARD	1
63	650-0005L822-00-00	PIN "C"	2
62	650-0005L814-00-00	DECK BRACKET	1
61	660-EPH26048-27-00	SCREW 2.6X4	2
60	650-0005L802-00-00	FRONT BRACKET	1
59	660-EPH30053-21-00	SCREW 3X5	4
58	661-ERM0000-04-00	E-RING	6
57	650-0005L809-00-00	ARM	2
56	650-00029011-00-00	DISC FELT	1
55	703-00029001-00-00	CD INSIDE PROOF FELT	1
54	660-MH26050-24-01	SCREW 2.6X5	2
53	600-0005L802-00-00	CD BASE	1
52	600-0005L823-00-00	CONNECTOR COVER	1
51	410-000005L8-10-01	FLEXIBLE PCB	1
50	374-00075000-00-00	DETACHABLE CONNECTOR	1
49	650-0005L825-00-00	SPRING "A"	1
48	650-0005L821-00-00	PIN "B"	1
47	600-0005L827-00-00	LOCKER "A"	1
46	650-0005L804-00-00	LOADING BRACKET	1
45	650-0005L805-00-00	SLIDE BRACKET	1
44	650-0005L812-00-00	SCREW	4
43	600-0005L8203-00-00	TRIM PLATE	1
42			
41			
40	600-0005L602-00-00	Display Lens	1
39	600-0005L628-00-00	Tune Button "B"	1
38	600-0005L615-00-00	"<" Symbol	1
37	600-0005L613-00-00	"*" Symbol	1
36	851-00060320-10-00	Foam Rubber	4
35	600-0005L614-00-00	">>" Symbol	1
34	600-0005L623-00-00	Function Button "B"	8
33	600-0005L611-00-00	PITY Button	1
32	600-0005L610-00-00	TA Button	1
31	600-0005L617-00-00	Power Button A/D	1
30	600-0005L621-00-00	Power Button	1
29	600-0005L608-00-00	Disp Button	1
28	600-0005L606-00-00	Mute Button	1
27	600-0005L607-00-00	PEQ Button	1
26	600-0005L630-00-00	Open Button "B"	1
25	600-0005L604-00-00	Mode Button	1
24	600-0005L622-00-00	Mode Button A/D	1
23	600-0005L609-00-00	AF Button	1
22	600-0005L608-00-00	AF Button	1
21	851-TF660001-10-00	Foam Rubber	1
20		Remote Control Lead	1
19		"B" TYPE	3
18		Foam Rubber	1
17	600-TM20081-24-00	"A" TYPE 2X8	1
16	600-TM20083-24-00	"B" TYPE 2X8	3
15	600-0005L8234-00-00	HANDY BAND	1
14	703-05M99501-00-00	CONNECTOR FELT	1
13		KEY BOARD	1
12	851-01005035-10-00	Black Spong	4
11	439-05M5L3-00-00	VFD DISPLAY	1
10	650-0005L8203-00-00	VFD HOUSE	1
9	600-0005L631-00-00	REFLECTOR	1
8	850-0005L603-00-00	White Spong "C"	1
7	650-05M35526-01-00	OPEN BUTTON SPRING	1
6	600-0005L629-00-00	Rel Button "B"	1
5	600-0005L627-00-00	SEL Button Adaptor	1
4	600-0005L604-00-00	SEL Button	1
3	600-0005L601-00-00	Handy Front "A"	1
2	600-0005L612-00-00	"*" Symbol	1
1	600-0005L627-00-00	VOL Button "B"	1
NO.	PART NUMBER	DESCRIPTION	QTY